




## Wiring Diagram Of SA-C5000FR

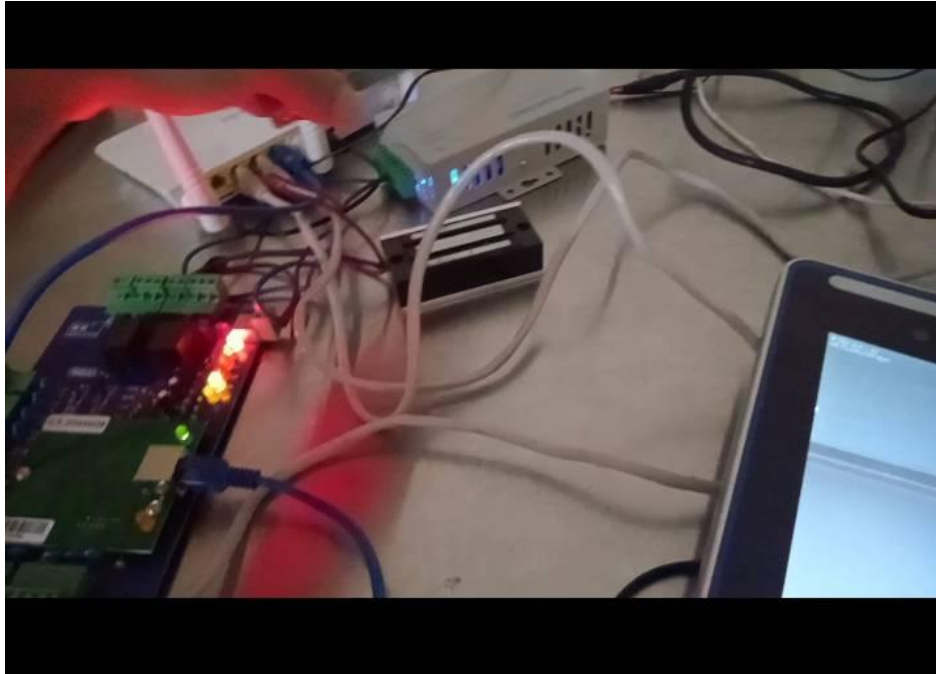

### Description:

Our face recognition access controller for face recognition access control support different access way such was reader+face access, face +access controller access, face directly access by doing the different wiring connection of the

The different signal


We take our face recognition machine SA-C5000FR for example

### Interface







1. face recognition machine wiring for face+reader access solution

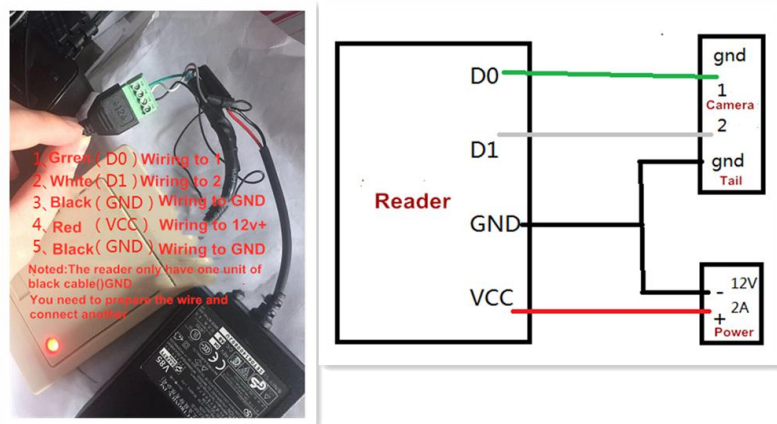

2. Face recognition machine wiring for face access by access controller solution

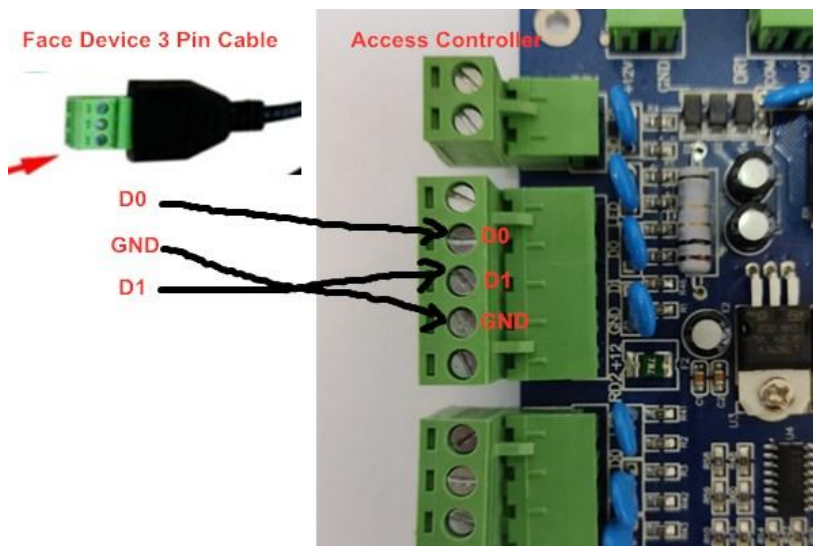

3..Face recognition machine wiring for face directly open the turnstile or electric lock

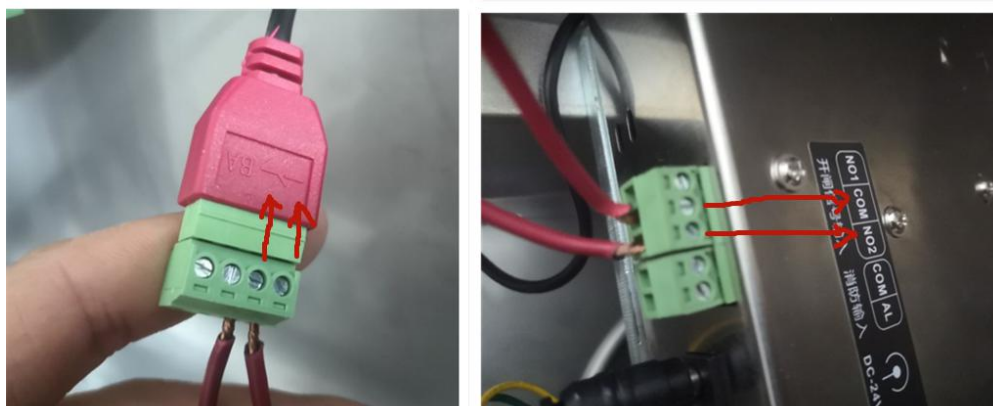

1. Connect the switch symbol from the red 4 pin cable to the turnstile gate main board no2 and com(Right Open)  
Please note that the while connect the cable to no.1 the gate will left open



**ShenZhen Sintronic**  
Technology Company Limited  
Access And Security Pioneers

<https://sintronictech.com>

Importance notice:

The computer ip address must set up to the same lan network as the face machine ip address

For example if the face machine ip address is 192.168.1.10 then the computer ip address must be setted up to

192.168.1.1 to 244

All rights reserved by shenzhen sintronic technology company limited